


## HOW IT WORKS

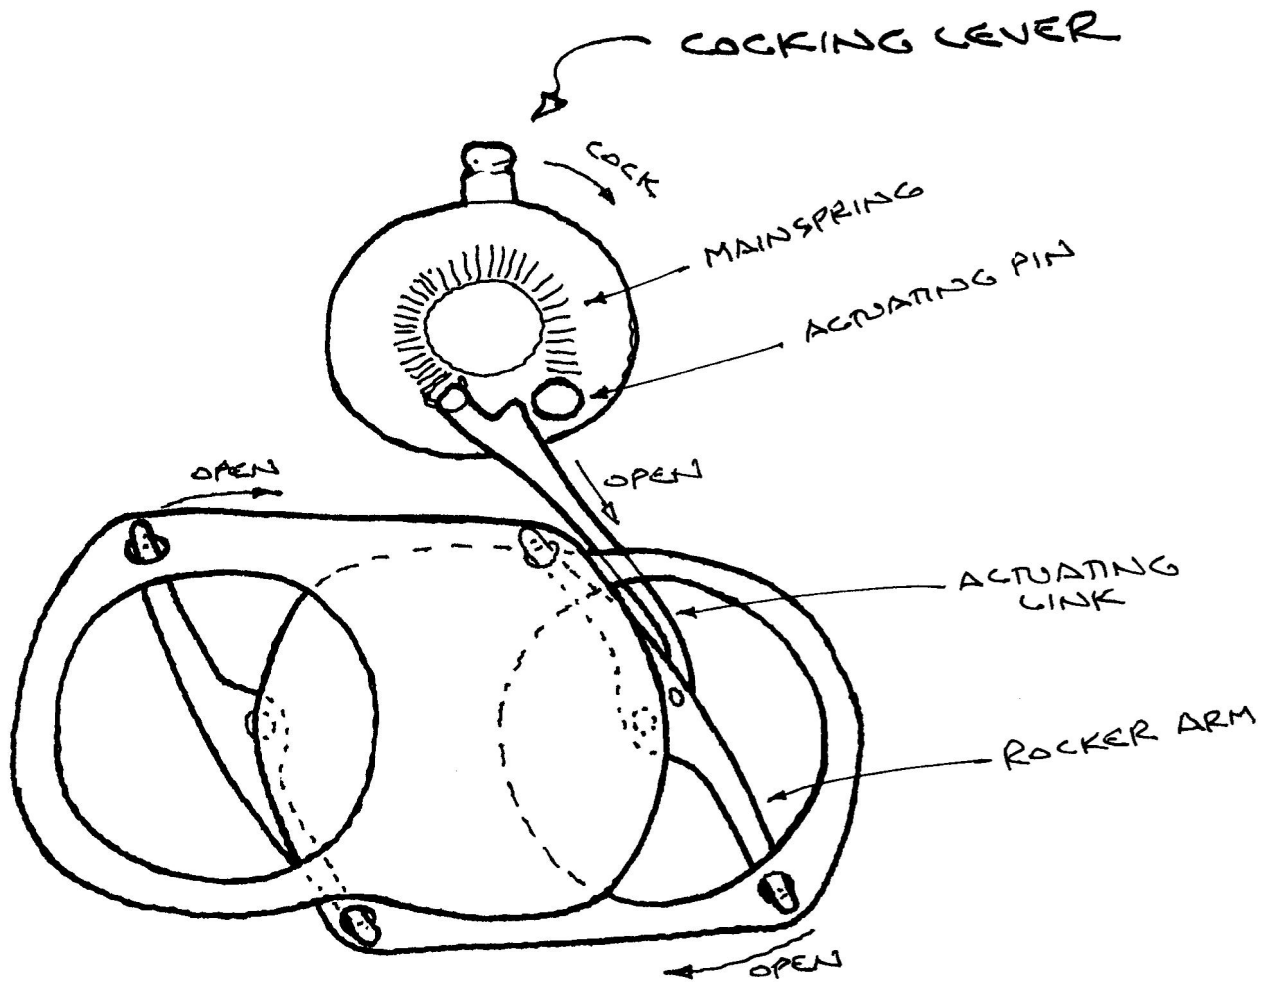

**COCKING:** MOVE LEVER CLOCKWISE UNTIL ACTUATING PIN CLICKS OVER PAWL ON ACTUATING LINK & CATCHES ON SR.

**RELEASE:**

- MAIN SPRING PULLS ACTUATING PIN COUNTER CLOCKWISE.
- ACTUATING PIN PUSHES ACTUATING LINK DOWN.
- ACTUATING LINK ROTATES ROCKER ARM CLOCKWISE.
- ROCKER ARM MOVES 2 BLADES IN OPPOSITE DIRECTIONS TO ALIGN 2 HOLES WITH LENS.
- PAWL SLIPS OFF OF ACTUATING PIN, MAIN SPRING PULLS ACTUATING LINK UP, RETURNS BLADES TO CLOSED POSITION.